


VI. Troubleshooting

See page 116 for a specific troubleshooting guide for the H2 ignition.

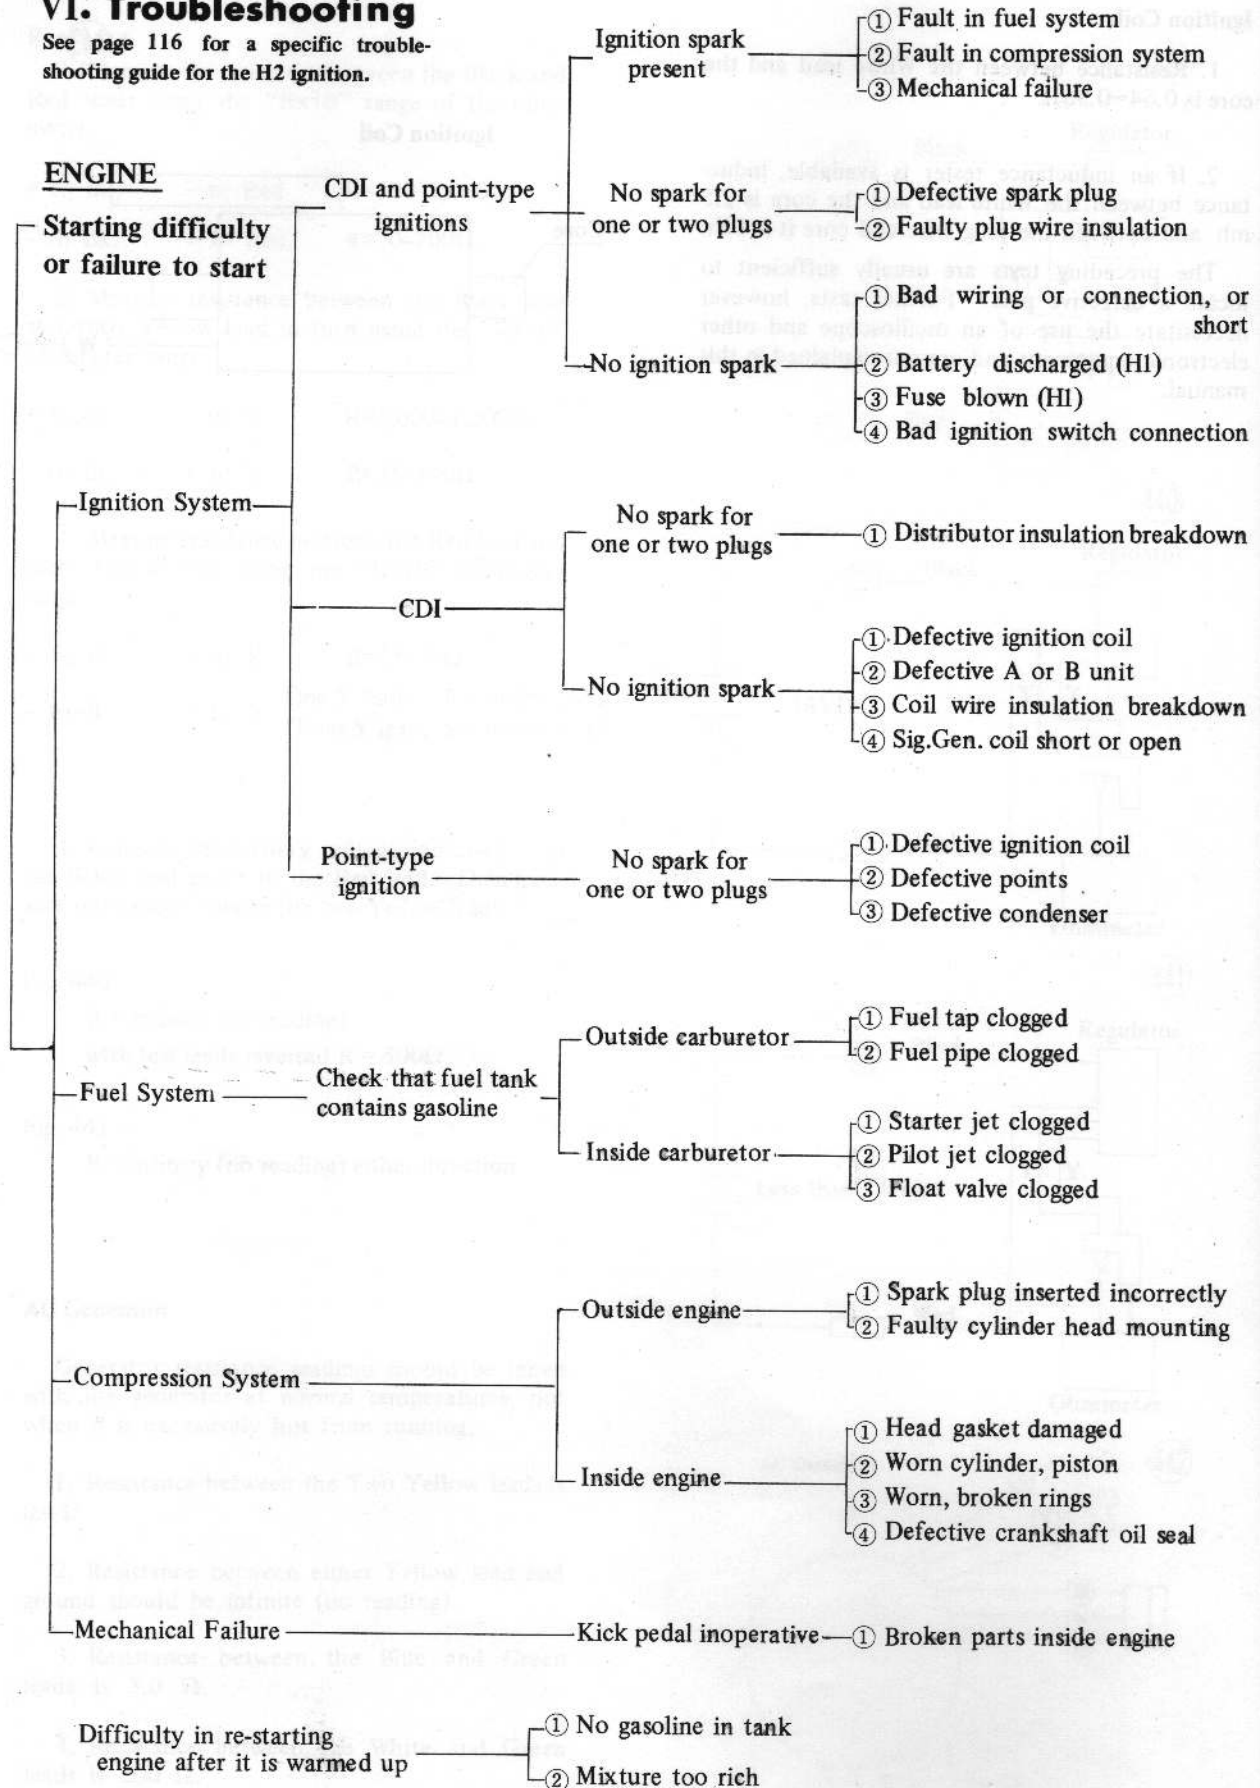

Note: When starting a warm engine, hold the throttle grip full open until the engine starts and r.p.m. starts to rise. Do not use the starter lever.