


# H2-B Wiring Diagram (US Model)

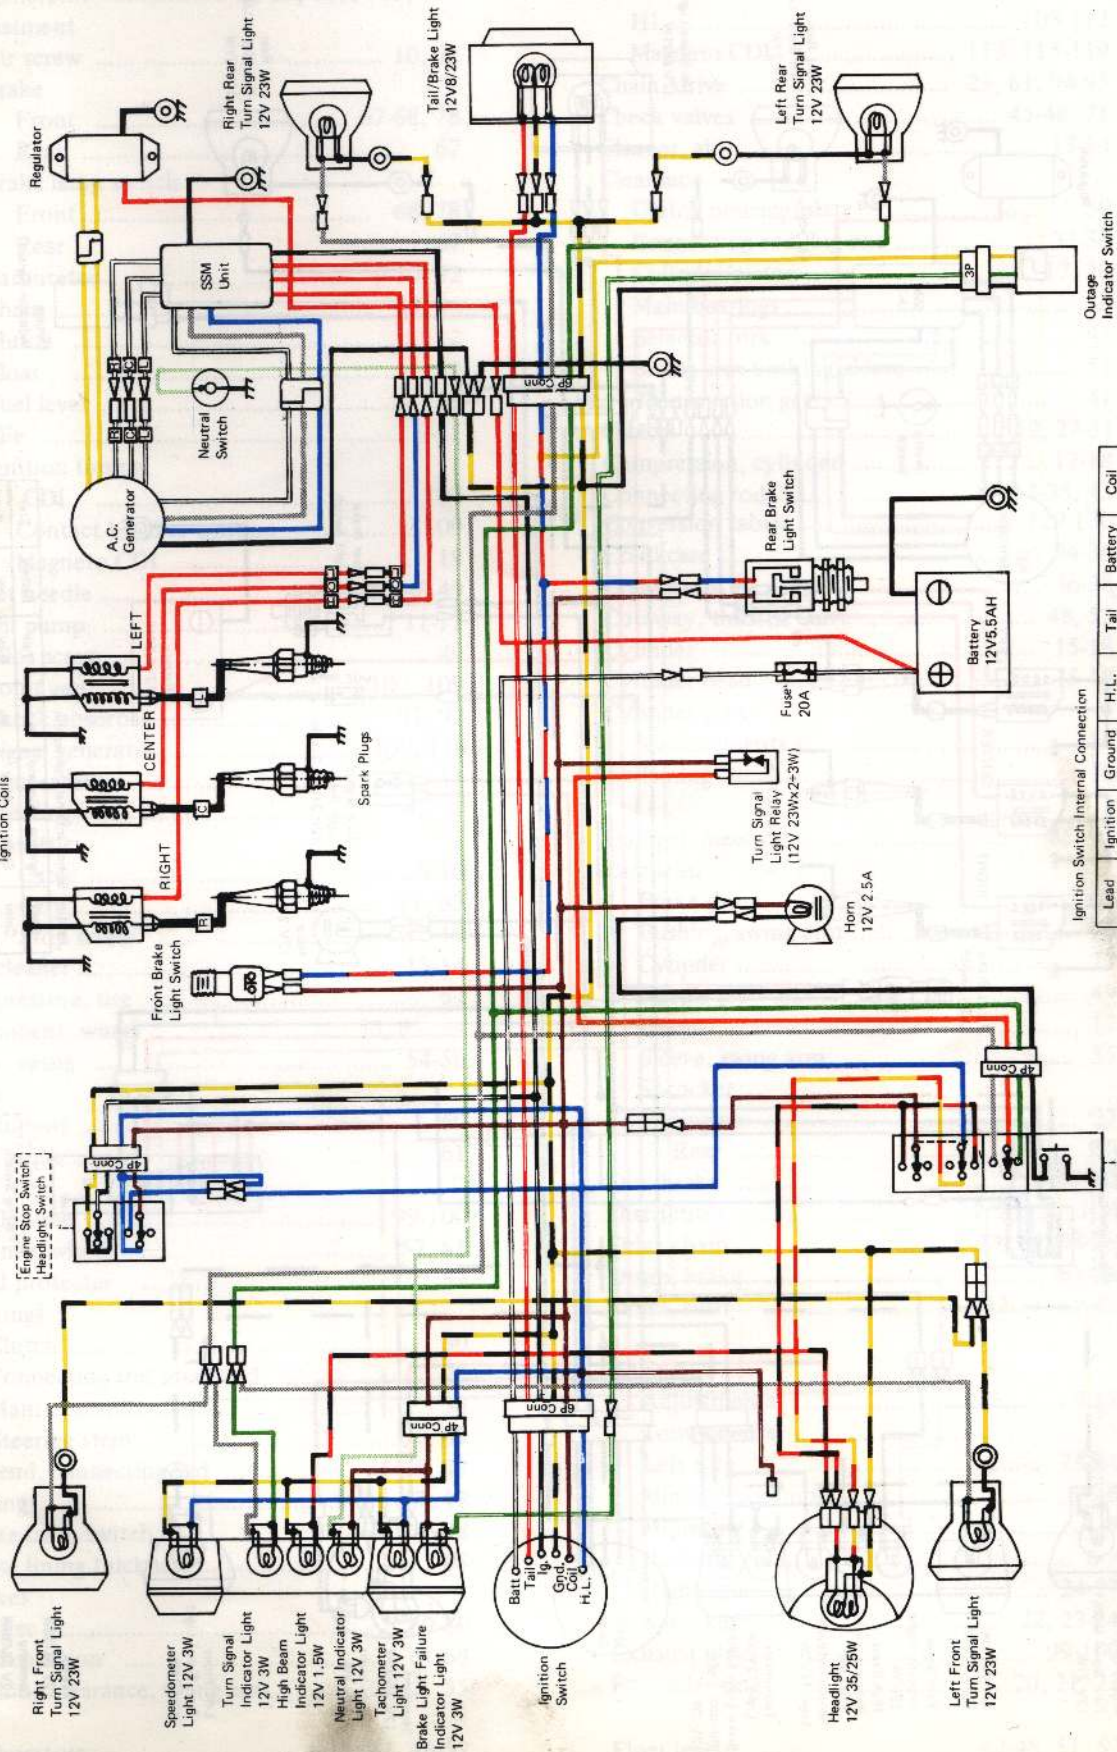

Ignition Switch Internal Connection

Lead	Ignition	Ground	H.L.	Tail	Battery	Coil
Color	Bk/W	Bk/Y	Bl	R/W	W	Br
Position	OFF	ON				
Position	ON					
Position						

(147-2)

Dimmer Switch  
Turn Signal Switch  
Horn Button

Outage Indicator Switch

H2-B Air/Fuel Diesel