



Crankcase Assembly


143

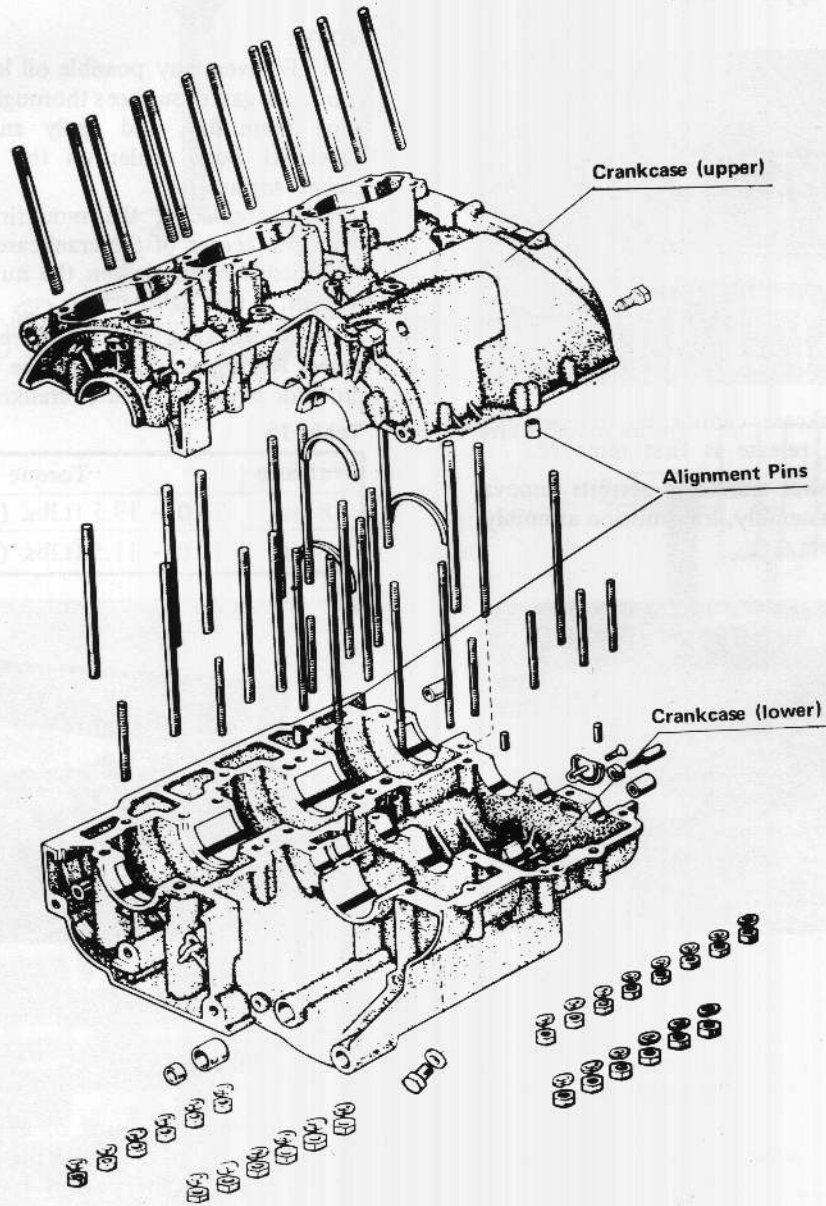

Loosen the kick stopper.

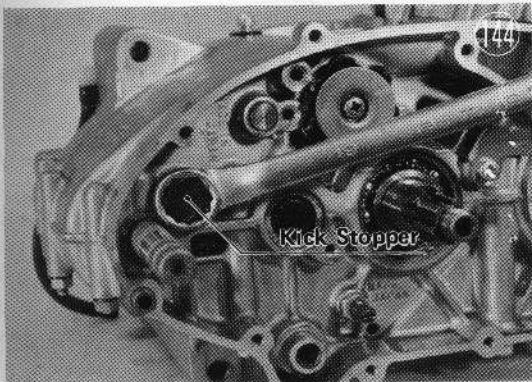

Turn the crankcase assembly upside down and remove the mounting nuts.

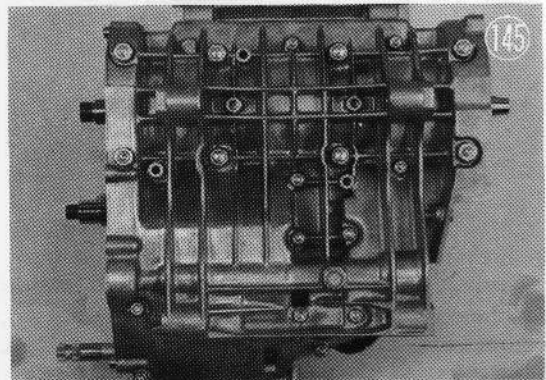

145