


### 3) Disassembly · Assembly

This is accomplished by removing or inserting the master link. It is helpful to give the chain some slack to make assembly/disassembly easier. When replacing the master link clip, the open end should face in the opposite direction to chain movement, to keep the clip from coming off and causing the chain to break.

The H2 chain has no master link. To remove it take off the rear wheel (page 59), the left rear foot rest, the left shock lower mount, chain guard, left engine cover, and swing arm shaft. Drop down the front of the swing arm and remove the chain.

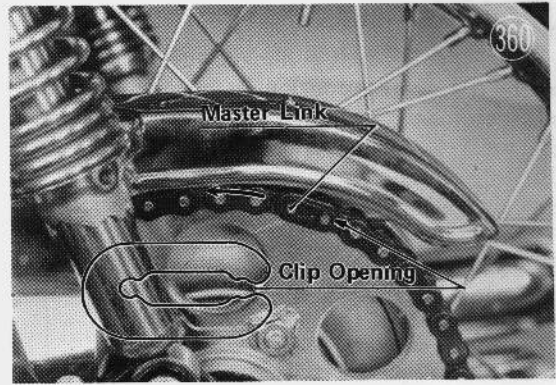


## 10. FUEL, OIL TANKS

### 1) Construction

#### a. Tanks

The fuel and oil tanks are made of special rust-resistant steel plate. (The H2 oil tank is formed from polyethylene.)

#### H1 Fuel Tank

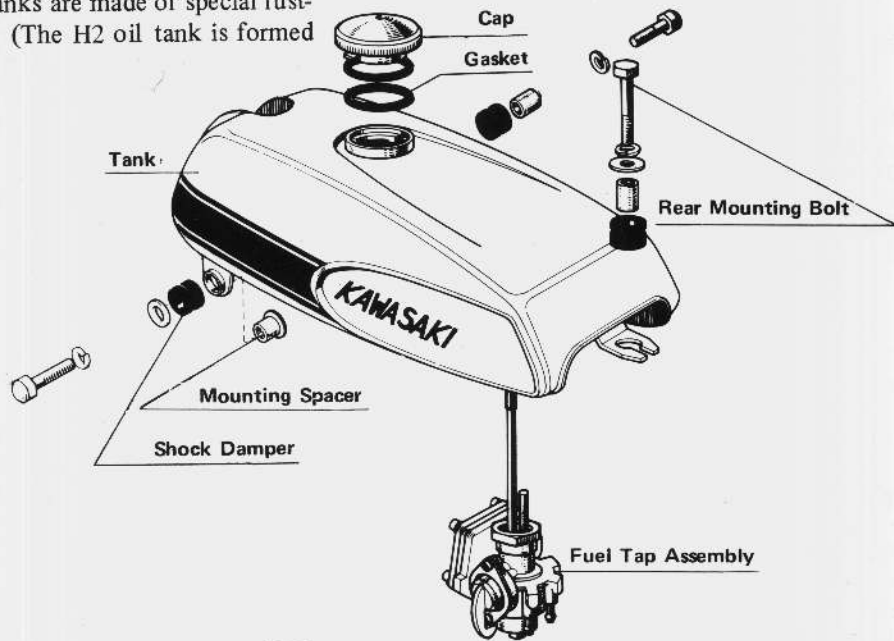

#### H1 Oil Tank

