

Periodic Maintenance Guide

Operation \ Frequency	After initial 800 km	After initial 5,000 km	Every subsequent 5,000 km	Every subsequent 10,000 km
Check, adjust brakes	•	•	•	
Check, adjust clutch	•	•	•	
Check, adjust carburetors and oil pump	•	•	•	
Check spoke tightness and rim runout	•	•	•	
Clean fuel system	•	•	•	
Clean, set spark plug gaps	•	•	•	
Check brake fluid level	•	•	•	
Check tire pressure and tread wear	•	•	•	
Change transmission oil	•		•	
Check points, timing	•		•	
Check steering play	•			•
Tighten bolts and nuts	•			•
Check drive chain wear		•	•	
Clean air cleaner element		•	•	
Perform general lubrication		•	•	
Lubricate drive chain	Every 300 km			
Check, adjust drive chain	Every 800 km			
Check brake wear	Every 10,000 km			
Change front fork oil	Every 10,000 km			
Change air cleaner element	* Every 10,000 km or after cleaning 5 times			
Change brake fluid	* Every year or 10,000 km			
Regrease wheel bearings	* Every 2 years or 20,000 km			
Regrease speedometer gear housing	* Every 2 years or 20,000 km			
Regrease brake camshaft	* Every 2 years or 20,000 km			
Lubricate steering stem bearings	* Every 2 years or 20,000 km			

* Whichever occurs first