

Index

- AC generator 22-23, 101, 103, 120
- Adjustment
- Air screw 10, 52
 - Brake
 - Front 67-68, 78
 - Rear 67
 - Brake lamp switch
 - Front 68, 78
 - Rear 67
 - Carburetor 9-10, 52
 - Chain 63, 94
 - Clutch 12
 - Float 52
 - Fuel level 52
 - Idle 9-11
 - Ignition timing
 - H1 CDI 107
 - Contact breaker ignition 109
 - Magneto CDI 118
 - Jet needle 48-49
 - Oil pump 11-12
 - Pilot screw 49
 - Point gap 107, 109
 - Shock absorber 91, 92
 - Signal generator 109, 118
 - Starter lever 11
 - Steering 90, 91
 - Throttle
 - Cable 9-10
 - Grip 11, 83
 - Stop screw 10
- Air cleaner 13-14
- Air pressure, tire 57
- Alignment, wheel 55, 61, 94
- Arm, swing 54-56
- Axle
- Runout 60
 - Torque 61
- Baffle tube 99-100
- Balance, wheel 57, 61
- Bead protector 57
- Bearings
- Clutch 30
 - Connecting rod small end 20
 - Main 38
 - Steering stem 89
- Big end, connecting rod 37-38, 43
- Boring 17, 18
- Brake lamp switch 67, 68, 74, 78
- Brake lining thickness 65
- Brakes
- Disc 69-80
 - Expansion 61-68
- Bushing clearance, swing arm 55
- Carburetors 9-11, 46-52
- CDI
- H1 108-112
 - Magneto CDI 113, 115-119
- Chain, drive 23, 61, 94-95
- Check valves 45-46, 71
- Cleaner, air 13-14
- Clearance
- Clutch housing/plate 30
 - Connecting rod, big end 37-38
 - Cylinder/piston 17, 20
 - Main bearings 38
 - Selector fork 41
 - Swing arm bushing/sleeve 55
 - Transmission gears 41
- Clutch 12, 27-31
- Compression, cylinder 17-18
- Connecting rods 20, 37-38, 43
- Conversion tables 129-130
- Crankcase 34-36
- Crankshaft 36-38
- Cutaway, throttle valve 48, 52
- Cylinder 15-18
- Cylinder head 15-18
- Cylinder port
- Measurements 15
 - Timing 15
- Damper, steering 85, 93
- Diameter
- Brake drum 65
 - Bushing, swing arm 55
 - Cylinder 17
 - Needle jet 49
 - Piston 17
 - Sleeve, swing arm 55
- Sprocket
- Engine 23
 - Rear 66
- Disc brake 69-80
- Distributor 24, 25, 26, 108
- Drive chain 23, 61, 94-95
- Drum, brake 61-68
- Drum, shift 32-34, 39-40
- Engine
- Adjustments 9-12
 - Components 5
 - Left side 22-24
 - Minor disassembly 5-6
 - Mounting 9
 - Removal 6-9
 - Right side 24-27
 - Sprocket 22, 23-24
- Exhaust pipes 99-100
- Expander ring 20, 21, 22
- Float level 47-48, 51, 52